

01








## Description



Please keep the **IPEI code** for future usage here:    
 The IPEI code is printed **outside the packaging board!**  
 (See also section "Unlock SwyxPhone D200 with the help of IPEI code")


02

## Icons in display

-  Signal strength display
-  Battery icon (fully charged)
-  Battery icon (battery flat)
-  Ringing/microphone switched to mute
-  Handset lifted / telephone ringing (icon blinks)
-  Disabled keypad
-  New entry in the list of missed calls

03


## Switch on and off.


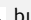 

→ Hold down the button  until the display lighting goes on or off.

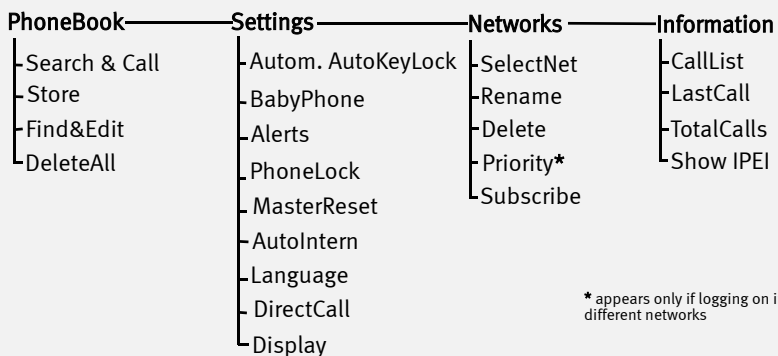
04






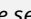 

## How do I use the menu?

You can set various functions from the menu. The following diagram gives you an overview of the menu structure.

→ Open the menu by pressing the  button.

You go directly into the first main menu entry, **Phonebook**. Use the   buttons to navigate between the main menu entries **PhoneBook**, **Settings**, **Networks** and **Information**. Each main menu entry has various options. You select the entry, or the option, by pressing the  button in each case.



**Example:** You want to set the **language** for the SwyxPhone D200 to **Italian**. To do this, press the  button to call up the menu. Press  to scroll to the **Settings** entry. Confirm the selection of **Settings** by pressing . The options under **Settings** will be displayed. Now press  to scroll through the options until you come to **Language**. Select the **Language** option by pressing . Press  to scroll to **Italian**. Confirm the selection by pressing . The selected language is activated at once.


05

## I want to input text.

You need this function when you want to add, find or edit a name in the phonebook, for example.

→ The keys in the keypad are assigned one or more characters. Press a key repeatedly to reach another character on the key.

**Example:** You want to input the letter "E" in input mode. Press the key "3DEF" twice to do so. The keys "0" and "1" hold special characters.

- To activate upper/lower case: press the \* key briefly.
- To insert blanks in the text: press the "1" key briefly.
- To delete a character: Briefly press the key .


06

## I want to lock the keypad.

When you carry the SwyxPhone D200 in your pocket, it can happen that buttons are accidentally pressed, causing a call to be triggered. To prevent this, you can set up a key lock.


→ In the menu under **Settings**→**AutoKeyLock**, select the option **On** and press .

The automatic key lock is activated. This means that if no key of the SwyxPhone D200 was pressed for 30 seconds, the keypad is automatically locked. Pressing a key then triggers no reaction at all.

The key lock is indicated in the display by the icon  "Disabled keypad".


**Note:** If a call comes in, the key lock is automatically removed. It is activated again 30 seconds after the call ends.


## Unlock keypad

→ To unlock the keypad again, press first the \* key and then .

07

## I would like to make a telephone call.


→ Enter the destination number you want. The number can be corrected with .


→ Then press the button  to start the call. The display shows the dialed number along with a counter representing the length of the call.

**Note:** When making outgoing external calls please remember you may have dial 9 to get public line access.

08


## It's ringing, I would like to answer the call.

→ Press the button , when a ringing signal is heard, in order to take the call. The number appears in the display, and if the number is stored in the phonebook the caller's name is also displayed.

→ To use the loudspeaker function, press .


09

## I would like to end a call.

→ Press the button , to hang up the handset. The call is terminated.


10


## I would like to call a number from a phonebook.

→ Press  to open the menu.

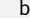 
→ Under **PhoneBook**, select the option **Find&Call**.

→ Confirm the selection by pressing . An input prompt appears, **Enter Name:**

→ Use the keypad to enter the name you want to find, and confirm the input by pressing . The name will be found and displayed.

→ If you press  once more, you will be connected.

## Quick dialing by entering a name

→ Hold down the button that includes the first letter of the name. Briefly press the same button to scroll through the characters of the button. Use  to select the name you want.

**Example:** You are looking for the name **Eva**. First hold down the key **3DEF**. The list then displayed begins with the letter **D**. Press the same key a second time to select the letter **E**. The first name that begins with **E** is displayed. Scroll with **▲** to the name you want. Then press **YES** to dial the number.

## 11 I want to edit the phonebook.

- Press **▲** to open the menu.
- Under **PhoneBook** → **Find&Edit**, select the option **Edit**.
- Confirm the selection by pressing **YES**. An input prompt appears, **Enter Name:**.
- Use the keypad to enter the name you want to edit, and confirm the input by pressing **YES**. The name will be found and displayed.
- Press once more on **YES** to go into the editing mode. The input prompt **Edit Name:** appears.
- Make the changes to the name, and confirm them by pressing **YES**. The input prompt **Edit Number:** appears.
- Save the number changes again by pressing **YES**.

## 12 I would like to make a second telephone call.

- You are already having a telephone conversation with a subscriber.
- During the active conversation, press **R**. The connection is put on hold.
- Now dial the number of the next subscriber. The call will be initiated.
- Switch between the subscribers by pressing the key combination **R 2**.
- End the current conversation by pressing the key combination **R 1**. The connection that was previously on hold is automatically activated.

## 13 I would like to transfer a call.

### Transfer with Inquiry

- During an active conversation, press **R**. The connection is put on hold.
- Dial the number to which you want to forward the call.
- If the subscriber is available, press the key combination **R 4**, to forward the call.
- To return to the caller, press the key combination **R 1**.

### Blind Call Transfer

- During an active conversation, press **R**. The connection is put on hold.
- Dial the number to which you want to forward the call. You will hear the dial tone.
- Press the key combination **R 4**. The call is immediately forwarded without inquiry.

## 14 I would like to turn my speaker on.

- You are telephoning and using the handset.
- Press the button **S**, to activate the loudspeaker.
- By pressing the button a second time you can continue to telephone on the handset as usual.

## 15 Do I have an answering machine?


You have a personal answering machine, also called "Voicemail". Voicemails are delivered by e-mail. You can also check them by remote inquiry.

**Note:** The Option Pack SwyxVoicemail must be installed in order to use voicemail. In addition, to activate the Voicemail functionality, an e-mail server must be available in your network.

## 16 I would like to listen to voicemails from another telephone.

- Call your own number and press **\*** during the welcome message.
- Enter your PIN and complete the entry with the **#** key.
- Please follow the instructions of the Remote Inquiry.
- Note:** In order to take advantage of this, Remote Inquiry and Call Forwarding must be configured for you. For more detailed information on this, please see Online Help or contact your administrator.




## 17 I would like to charge the battery.

Put the phone in the desktop charger. A full battery icon  indicates that the battery is fully charged.


**Note:** While the phone is in the desktop charger, it is fully operational.

## 18 Tips & Tricks

### Select number from the caller list

- Press the button **YES**. A list of the last 20 dialed, missed and answered calls is displayed. The different calls types are distinguished by the following symbols: Received call , Outgoing call  and missed call .
- Scroll with the buttons **▼ ▲** within the call list to reach the desired number. Confirm the selection by pressing the button **YES**. The number is dialed.

### Switch ringing signals on/off (Mute)

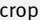 
- Press the button **C**, to silence the telephone temporarily while it is ringing. The phone rings again on the next call.
- To mute the ringing signals permanently, press the button **C** (in standby mode). The question "Mute ringer?" appears in the display. To confirm, press the button **YES**. The sign  "Sound mute" in the display indicates that the ringing sound is switched off.
- To switch the ringing signal back on, once again press the button **C**.

### Rapid selection of language

- Press the button **C** for 7 seconds. The language menu will appear. Use the navigation buttons **▼ ▲** to select the language you want. Confirm the selection by pressing the button **YES**.

### Switch microphone on/off

Switch the microphone off in order, for instance, to prevent the subscriber on the phone from hearing other conversations that you may have with colleagues.

- During the conversation, press **C**. The display shows the sign  "Microphone off".
- The microphone is switched back on when the button is pressed once more.

## 19 Settings

### Adjust handset volume (during the call)

- Press the upper volume button to increase the volume, and the lower volume button to reduce the volume.

### Change the ring volume

- In the menu under **Settings** → **Alerts**, select the option **RingVolume**; this will bring you to the volume configuration. You can select the desired volume by pressing the **▼ ▲** buttons.
- Confirm the selection by pressing **YES**.

### Ringtone

You can set different ringtones for each call type (e.g. internal calls, external calls, callbacks, messages and search).

- In the menu **Settings** → **Alerts**, select the option **RingType** and press **YES**.
- Use the navigation button **▲** to select the relevant call type (e.g. external) for which you want to set the ringtone. Press the button **YES**.
- The ringtones (e.g. mixed, melody1 etc.) are briefly played after the call type is selected.
- Press **YES** to set the ringtone.

### Switch vibrator on/off

- In the menu under **Settings** → **Alerts**, select the option **Vibrator**. You can then choose the following options:
  - **Switch Off**  
The vibrator is off.
  - **Switch On**  
The vibrator is always on.
  - **Switch On if silent (OnIfSilent)**  
The vibrator is only on if the SwyxPhone D200 has been set to **silent**.

### Unlock SwyxPhone D200 with the help of IPEI code

If the wrong PIN has been entered three times the SwyxPhone D200 has to be unlocked by entering the IPEI code.

- **Backdoor:** is shown in the display. Please enter the IPEI code and press **YES**. The SwyxPhone D200 will be unlocked.
- Please enter a new PIN and repeat it. Confirm the entry by pressing **YES**.

**Note:** Please note that the SwyxPhone D200 is not supported by the option pack SwyxCTI.

All of the product and brand names mentioned here are registered trademarks of the respective manufacturer.  
12/2006 – Subject to technical changes.

